



# 12'x12'

BACKGROUND STAND

# Assembly & Usage Instructions



## CONTENTS

- (2) Stand uprights
- (4) Crossbar sections
- (1) Crossbar male-male adapter
- (2) Reversible 1/4"-20 - 3/8" studs
- (1) Carry bag


## 1) SETTING UP



Unpack each stand upright, and loosen leg locks. Pull the upright section upwards while pushing the leg bracket down to extend the tripod legs.



## 2) POSITIONING UPRIGHT STANDS

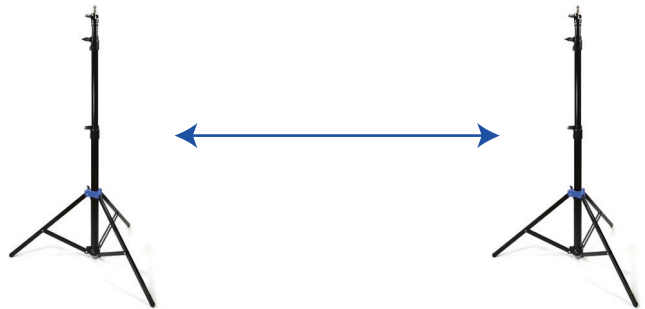

Place stands proper distance apart. Refer to Step 3 for crossbar configuration.

## 3) ASSEMBLING CROSSBARS

Assemble crossbar sections as depicted below. Store unused sections in carry bag.

### FOR 6' WIDE APPLICATIONS



### FOR 9' WIDE APPLICATIONS



### FOR 12' WIDE APPLICATIONS




Push crossbar sections together until the silver pin snaps into hole.

## 4) ATTACH CROSSBAR TO UPRIGHTS



Unscrew the wingnuts on the sides of the end crossbar sections. Place the assembled crossbar over the reversible 1/4"-20 / 3/8" studs on top of the two uprights.

## 5) HANG BACKDROP AND RAISE UPRIGHTS

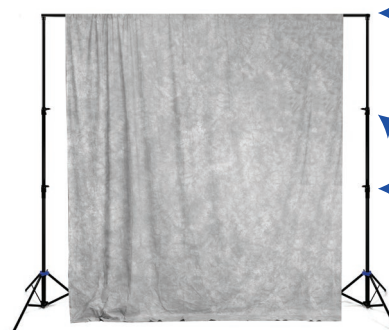

Lift one end of the crossbar off upright stud, and slide backdrop across the full width of the crossbar. (You may need to fully remove the wingnut from the crossbar to slide backdrop over end of crossbar. Once backdrop is in position, reattach wingnut).

Loosen upright knobs when backdrop is in place and carefully raise each section equally on both sides until the backdrop is at the proper height for the desired usage.

If using a backdrop with a rod pocket or inner core, lift one end of the crossbar off of the top stud and carefully slide your backdrop onto the crossbar. If using a backdrop without a rod pocket or inner core, use spring clamps to attach the material to the crossbar at several even points along the crossbar. Tighten wingnuts on each end before use.